



POSITION
DTI UNDER
BOLT HEAD

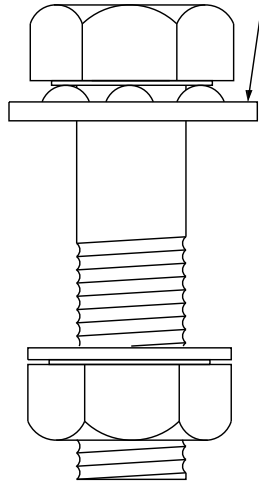

BEFORE


HOLD HEAD
FROM ROTATING

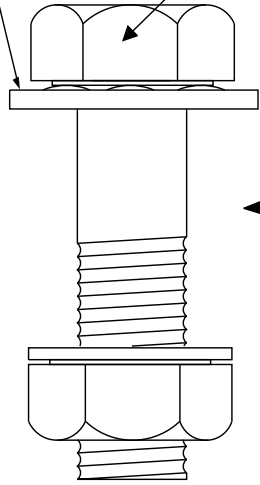

AFTER


← OR →

POSITION DTI UNDER
FLAT WASHER
ON NUT END

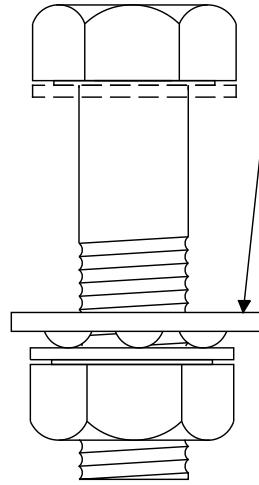

BEFORE

FLAT F436
WASHER MAY
BE REQUIRED

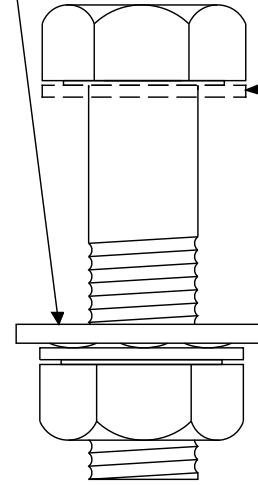

AFTER

TURN NUT TO TIGHTEN BOLT